

Der Hebel muss immer nach vorne zeigen.

NO.	Parts List	Q'ty
①		X1
②		X1
③		X1
④		X1
⑤		X1
⑥	M8X17	X1
⑦	M8X20	X1

  

1	
2	
3	
4	
5	
6	