














# Montageanleitung Paketwagen-Postverteilwagen - KM10000

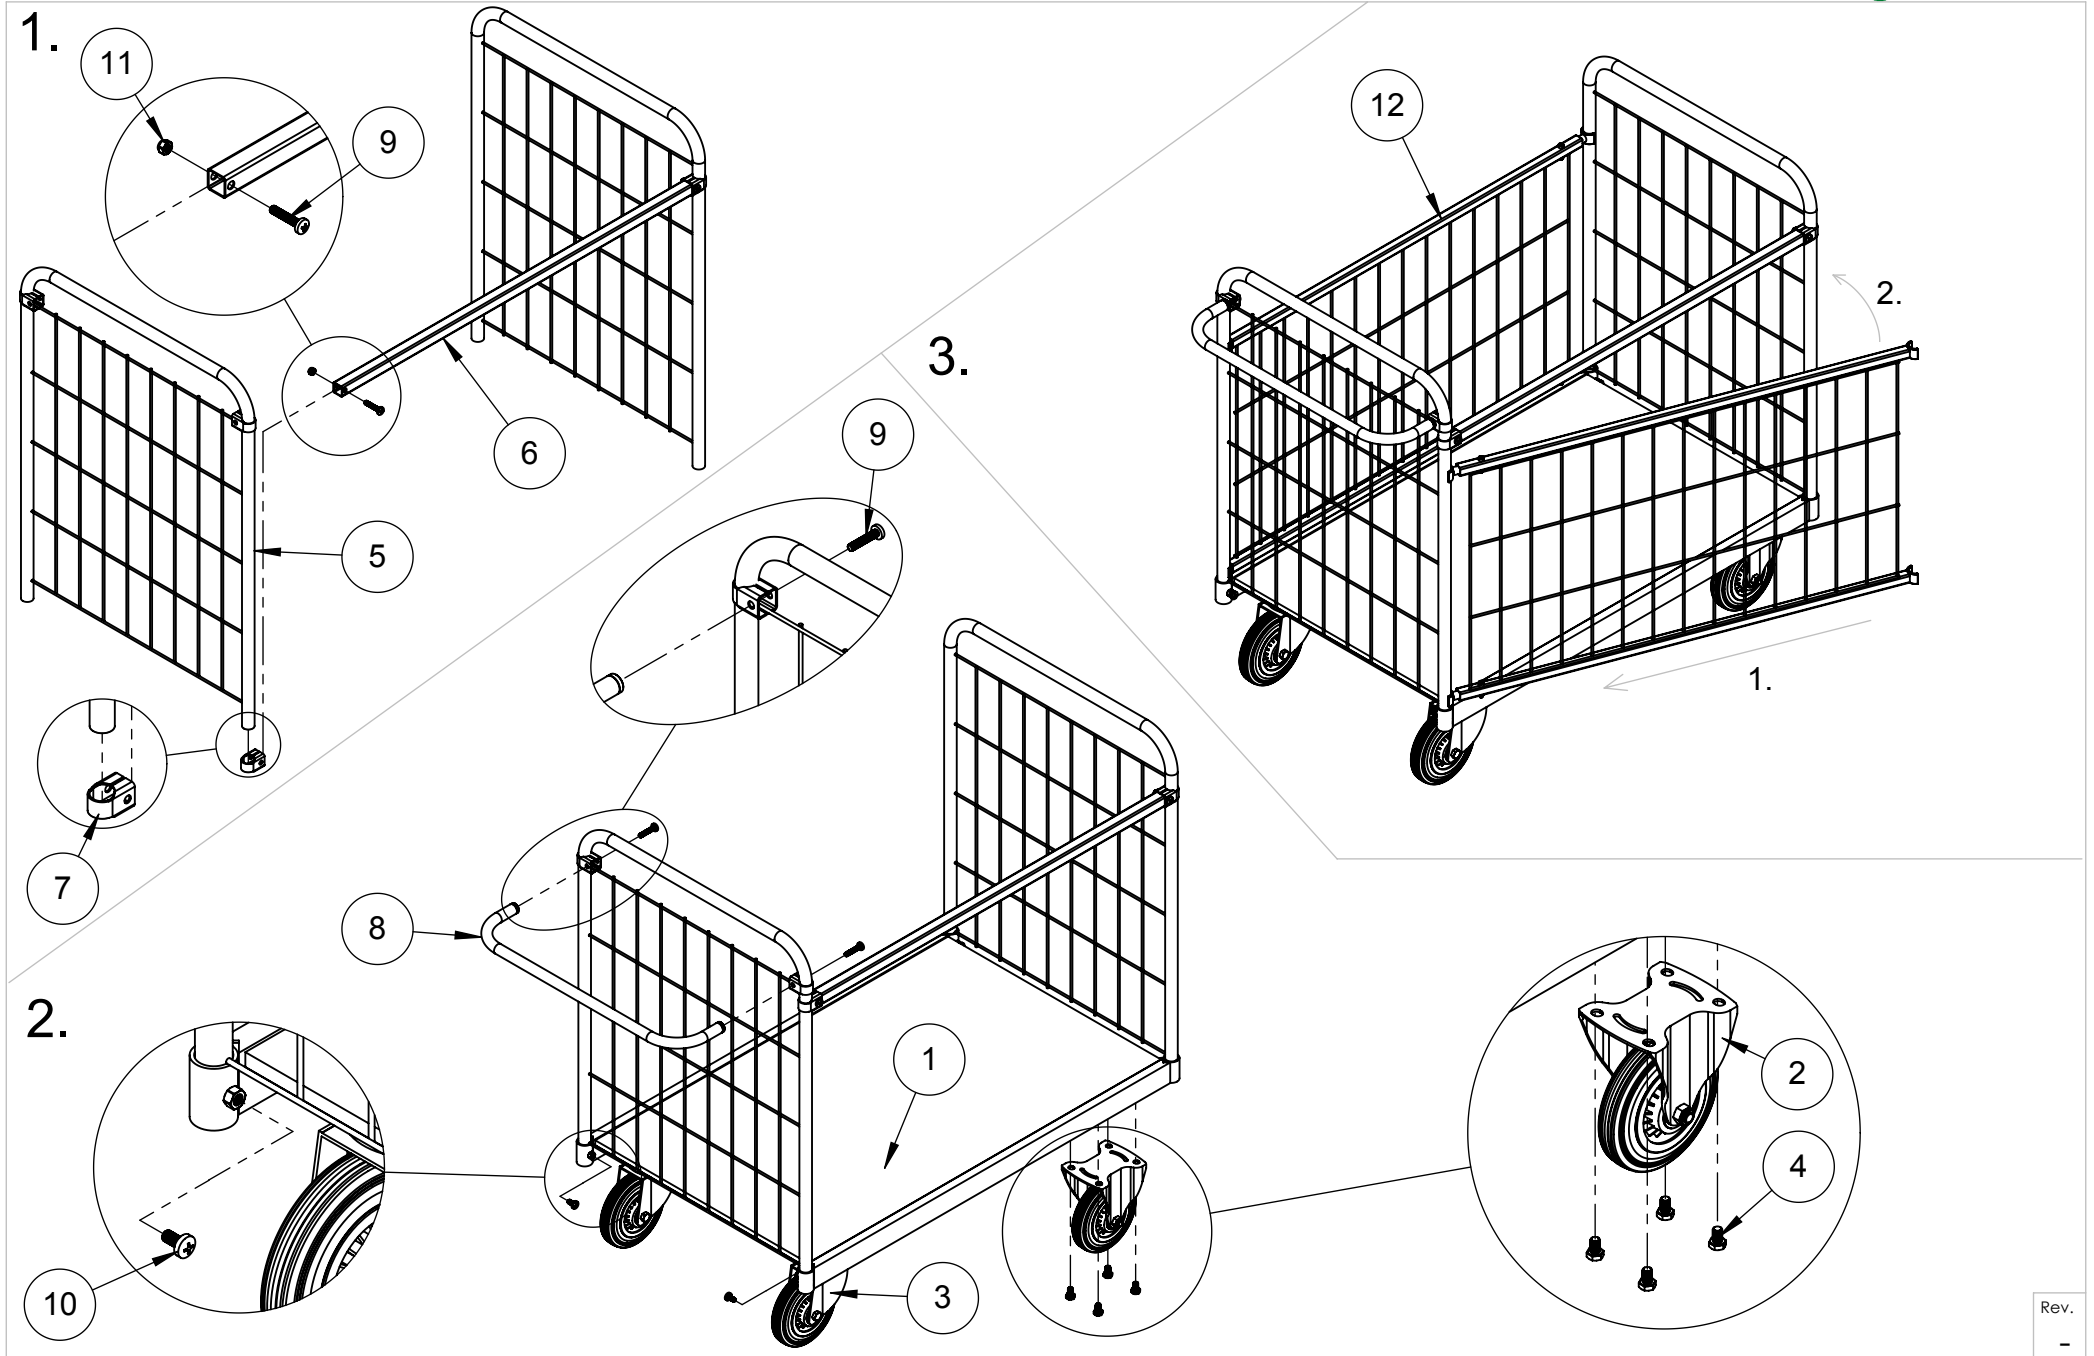

# KM10000

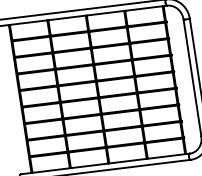

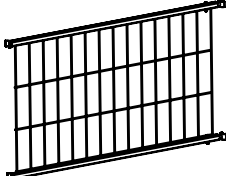1	2	3	4	5	6	7	8	9	10	11	12
											
1x	2x Ø160	2x Ø160	16x M10x16	2x	1x	4x	1x	4x M8x40	4x M8x16	2x M8	2x

Rev.

-